

User Guide(LSLE1012F)

1.Reset:

When batter unload,press the red button on the lockset for long time,install the battery for powering on.Beep will sound after 10 seconds,loose your pressing when green light on.Finally,all the previous data(registerd fingerprints) are cancelled.

2.Register Fingerprints:

Press the red buttun,when the reader show red light ,put your finger on the reader, beep sound'di',take away your fingerprint when green light on.Then put your fingerprint on the reader again,beep sound'di,di',registering is succeed when green light on.(If red light on,registration fails).The memory of fingerpring registration is 32pcs.

3.Door Access By Fingerprint:

Press black buttun,when the fingerprint-readershow red light,put any registered fingerprint on the reader,beep will sound'di'.The lock will be released after green light showed on the reader.

Notice:Before fingerprint registration,lock can be open by any fingerprint.While fingerprint registered,lock only can be open by registered fingerprint.

4.Close The Lock:

Press the black buttun for closing the locker when locker in open status.

Notice:the beep will sound every 10 seconds if locker in open status.

5.Alarm Against Low Battery:

When you open the locker,if red light flash,it states battery in low-power level.The user should replace the battery on time.