

LSLE1212D USER MANUAL

1. Setting Method:

(1).How to set main card:press originated button for originating the record data.The card inducted first time will be set as main card.

(2).How to set/cancel sub-card:induct main card 2times,login set/cancel sub-card status. After inducting by preset card 1time,

①. the preset card without set as key previous,will be set as sub-card.The chord will send out when succeed.

②. the preset card with set as key previous,will be cancelled.The chord will send out when cancelling succeed.

(3).Cancel all sub-cards:by inducting main card 3times continuously.

2.Unlock Method:

Unlock by main card/sub-card.Be aware of unlocking by main card to avoid error operation as follows:

①.login set/cancel sub-card status.

②.login cancel all sub-card status.

3.Auto-lock function:

Once the oblique lockpin insert into the lockhole for 3s when close the door,auto-lock will be available.

4.About Power:

This model use 3pcs 1.5Voltage(AA) alkalinescent battery.

5.Low-power alarm:If work voltage lower than 2.7v,chord will send out when open the door.The power enough for unlocking 200times after first chord sending out.In this case,the battery should be replaced.When the inside battery exhausted,use the urgent battery(5V) to connect the outside panel instead.

6.Alarm against error:after 3times unlock continuously by untitled card,will alarm by acute voice and in void work for 1min against any unlock operation.

7.Alarm against theft:alarm by acute voice when break open by outside force.

