 



User Manual Of Fingerprint Locker Lock

1.Function Key Show:

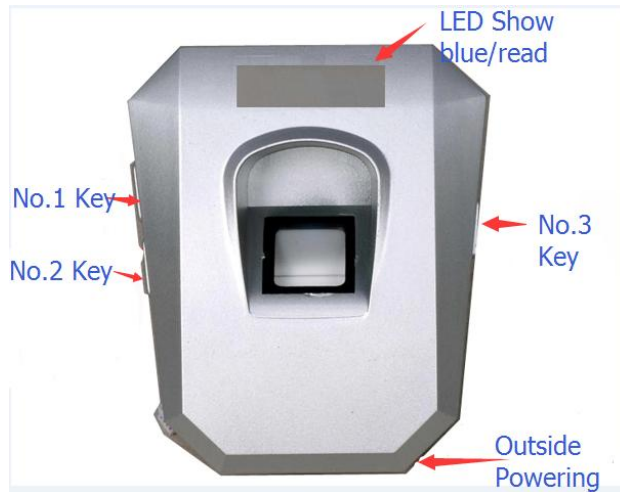


2.Read Fingerprint On Sensor In Place:

 
(1).Correct Reading:

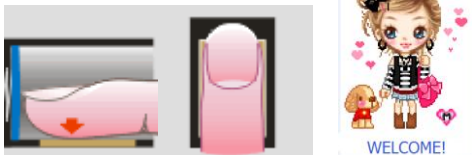

 (2).Incorrect Reading:

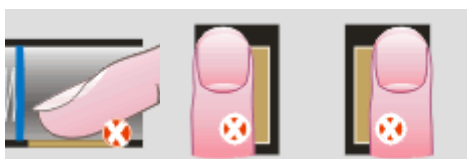

①.Lean ②.leftside ③.rightside

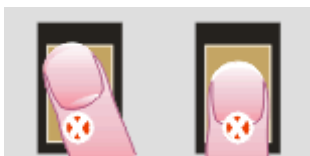

④.decline ⑤.downside

3.Programming:

First:connect the cable(patch cord) from back panel to the front panel,installed 4pcs AA battery.

(1).Programme(Register) First Fingerprint:

Read any fingerprint on the reader, when lock opening, press "No.1 Key", the reader will light,then read your any fingerprint for registration.When light blue,means registration is successful,if red light,means failure.

(2).Programme(Register) Other Fingerprint:

Read the first registered fingerprint to open the lock, when lock opening,press "No.1 Key", the reader will light,then read your other fingerprint for registration.When light blue,means registration is successful,if red light,means failure.

(3).Delete Fingerprints:

Read any your registered fingerprint to open the lock when lock opening,press "No.2 Key" for about 4 seconds until buzzer "di----" sound,which means lock is programmed into default settings.In other word,all the fingerprint has been deleted.

(4).Programme Unlocking Password:

Read any your registered fingerprint to open the lock,when lock opening, press"No.3 Key",the blue light will flash,that means:you can now programme unlocking password,the password must be 8-digit by any combination of "No.1 Key + "No. 2 Key",such as 1111 2222 or 2121 2121. When programme the unlocking password,you have to input the password 2 times for final confirmation.The initial password is:12121212.

(5).Unlock By Fingerprint:

Read any registered fingerprint directly on the reader,then lock can be open.Before read the fingerprint,you can press "No.3 Key" for start unlocking status.Or without press "No.3 Key",you can also read your fingerprint directly for unlocking.

(6).Unlock By Password:

Input the unlocking password directly for door lock release.